

## FITTING THE ROUTER AND THE CUTTERS

### INTRODUCTION

The information below is reproduced from the Axminster universal base plate fitting instructions and the hole layout on the router elevator base plate is identical. Hole numbers, screw types and how many required are given for mounting


**Please note: Some of the router's listed in this chart may not be suitable for use with the router elevator.**

different router models to the router elevator base plate. For advice on models suitable for fitting to the router elevator please contact our experts on **03332 406 406**

	<b>New switch regulations means NVR Switch cannot be used!</b>
	<b>Handles may need to be removed!</b>






<b>BOSCH</b>	1700ACE, POFS2	1	Fx2	<b>HIKOKI</b>	MT2VE	11	Dx4
	400,500A,600ACE	3	Fx2	<b>MAFELL</b>	LO50E	8	Bx4
	POF800ACE,GOF900A <2003	4	Gx3		LO65EC	3	Dx2
	GOF1300ACE,900A>2003	5	Gx3	<b>MAKITA</b>	3620, 3612BR, 3600B	13	Dx2
	GMF1400	0	W4		3612(C)	14	Ex2
<b>CMT</b>	CMTE, CMZE	1	Fx2		RP0910, RP110C, RP111C	1	Fx2
<b>DEWALT</b>	DW613, 614, 615, 620, 621, DW625EK, 629, DW625EK, DW625KT	1	Fx2		RP2301FC, RP230FC	22	Bx4
				<b>PRO</b>	CLM1250R >11/03, CLM2050R	1	Fx2
				<b>PERLES</b>	OF808(E)>1999, 2-808(E), OF9(E)	1	Hx2
<b>DRAPER</b>	R1900V	2	Fx3	<b>PEUGEOT</b>	DEF570E,DF55E	15	Ex2
	PT1,200V	1	Fx3	<b>RYOBI</b>	RE600N, R600N, RE601, ERT1500V	13	Dx2
<b>ELU</b>	OP97(E), MOF177(E), 131,98, MOF77,96(E), MK2,69	1	Fx2		R500,502	16	Ax4
<b>FELSATTI</b>	R346EC	1	Ex2	<b>SKIL</b>	R150, 151, RE120, 155K, 183SU,187SU1	15	Ex2
<b>FESTOOL</b>	OF2000(E)	7	Ex3	<b>TREND</b>	T3, T4, T5, T5EK, T5MKC, T9, T10, T11 (T14 has own NVR switch)	1	Hx2
	OF1E,300(E), 1000(E), OF1010	8	Bx4 & Ax3				
	OF1400 EBO-Plus	23	H2				
<b>FREUD</b>	FT1000(E), 2000E	2	Fx3	<b>TRITON</b>	MOFO001, TRAA001	21	1/4" UNC 6.35mm
<b>HITACHI</b>	M8(V)	10	Dx4	<b>WADKIN</b>	R500	16	Ax4
	M12V, M12SA	11	Dx4				
	TR12	11-12	Dx4				

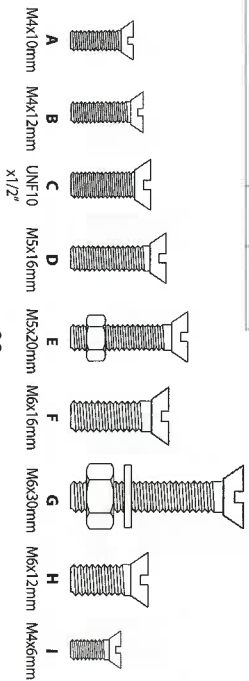

08

## UNIVERSAL BASE PLATE

## FITTING THE ROUTER AND THE CUTTERS

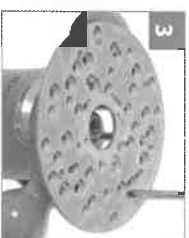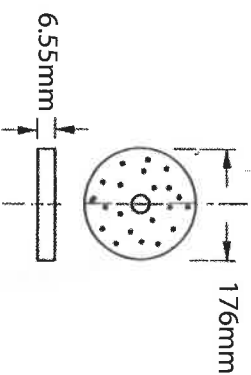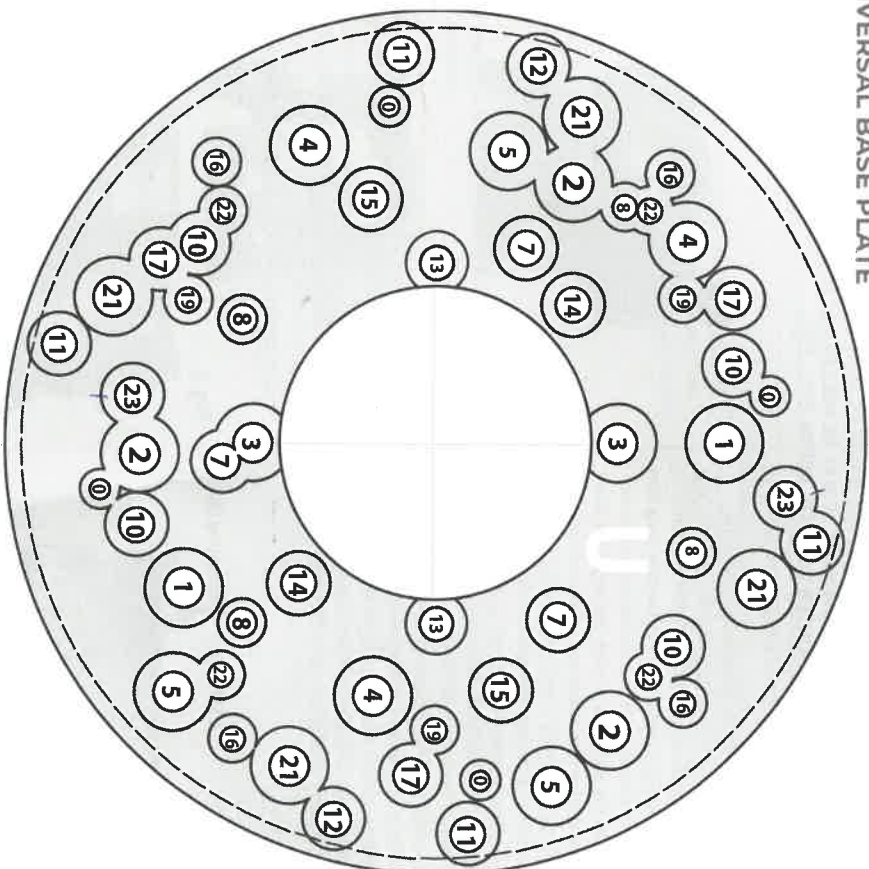

09